


Customer							
Material	AVACEL			Est. Bulk Density	0.3		
Desired range	1.000 gm to 10 gm						
Desired accuracy	Plus/Minus 0.0005 gm						
		Sample weight		Control unit settings			
Micrometer setting		gm		Vacuum (1in hg)	Air (psi)		
500	Start	0.4840		10	10	tip size small	
600		0.8663					
550	Run	1.0429		20	14	Reset Air/Vac	
		1.0379					
		1.0320					
		1.0368					
		1.0410					
		1.0329					
		1.0383					
		1.0324					
		1.0244					
		1.0478					
		1.0178					
		1.0267					
		1.0132					
		1.0326	Av				
		1.0326	Mean				
		0.0099	Std Dev				



### Sample Size

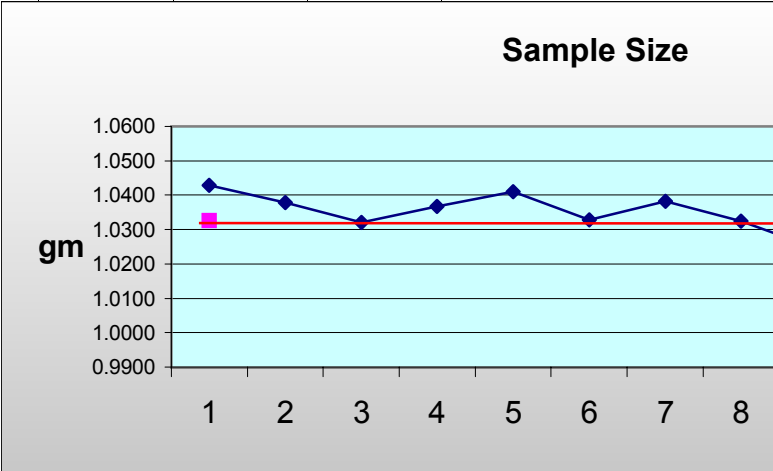